

Genie Ultra Micro

Contents

- 1** Monitor stand (optional)
- 2** Genie Ultra Micro chassis
- 3** Cable cover (optional)
- 4** Monitor (optional)
- 5** Power Adapter
- 6** Fittings (see 'included fittings' below)



Included fittings

If you purchased your Genie Ultra Micro from Viglen, the fitting lugs (2x screw A) will already be in place. Otherwise you will need to fit the lugs shown below.



Additional parts

Depending on the configuration you purchased, you may also receive the following items:


- ◆ Internal Speaker (mounted in the Cable Cover)
- ◆ Split Mains Power Cable for the base unit and monitor (includes a converter for the AC adapter)

Tools required

Cross-head screwdriver


Step 1 Mounting the cable cover

- ◆ Feed all cables through the aperture in the bottom of the cable cover and attach them to the ports on the motherboard, including the cables from the optional monitor stand and optional internal speaker.
- ◆ Slide the AC Adapter into the cable cover and insert the retaining block (figure 1 and 2).
- ◆ Attach the power connector to the power socket at the rear of the chassis (figure 3).
- ◆ Attach the cable cover on to the Genie Ultra Micro chassis by engaging its lugs in the corresponding holes at the rear of the chassis and slide down firmly until you hear it clip into place.
- ◆ An optional Kensington-style locking device can be used to lock the cable cover in place.

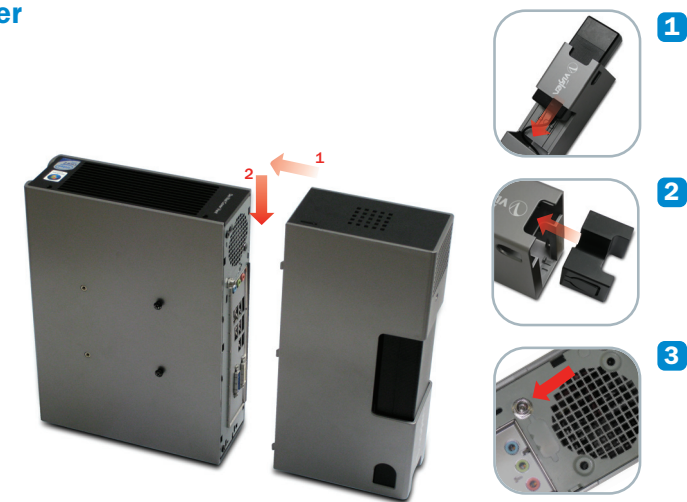

Step 2 Attach the chassis to the stand

- ◆ Ensure that screws A are fitted to chassis. Align the chassis onto the monitor stand and slot into place.
- ◆ Slot the chassis down into the slots marked 2 to lock into place (figure 1).
- ◆ Turn the retaining clips to secure the chassis and lock the chassis using optional screws B provided through the low holes on the retaining clips (figure 2).

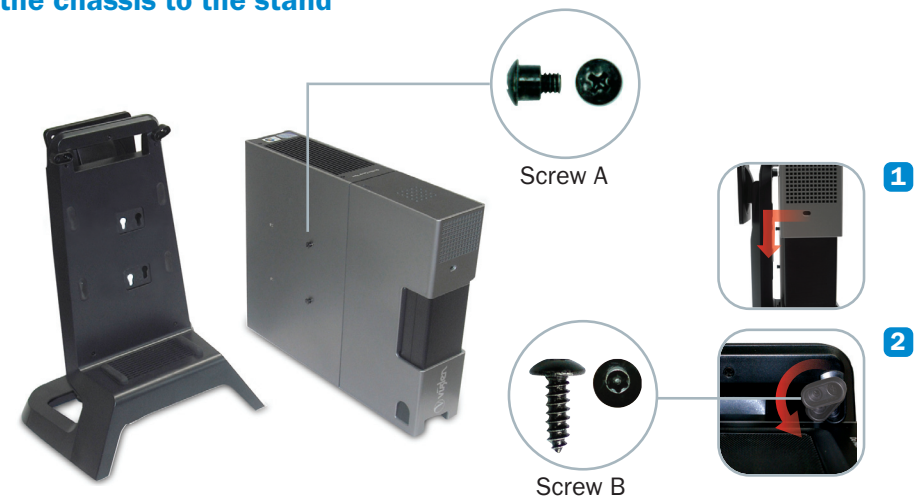

Step 3 Securing the monitor to the stand

- ◆ Ensure that screws C are fitted to the two bottom monitor VESA points (figure 1). Align the rear VESA mount of the monitor with the VESA bracket on the monitor stand.
- ◆ Ensure the monitor is now slotted in place on the VESA plate (figure 2).
- ◆ Hold the monitor in place and secure it using the screws D provided to the upper holes (figure 3).



Viglen System Recovery Utility (Optional)

Under certain conditions you may need to reset the software originally installed on your computer to factory conditions, this can be put down to many different reasons:

- ◆ Accidental deletion of system files.
- ◆ Incompatible software has been installed.
- ◆ Incompatible changes to the system settings.

At Viglen, we understand that unless you have professional knowledge of computer systems, reinstallation can be a costly and time-consuming affair, especially for new users. This is why we have created the Viglen Recovery Utility System – designed to automatically reinstall your computer software quickly and efficiently.

Before proceeding with system recovery, please observe the following recommended guidelines.

- ◆ Back up all personal files to a CD or a suitable backup device before proceeding with the recovery procedure.
- ◆ Any subsequent software installed by the user must therefore be manually reinstalled – Please refer to the manuals that came with your software for installation instructions.
- ◆ Once initiated, all data stored on the system will be destroyed and will therefore not be recoverable.

Using the Recovery Utility

Please read the recommended guidelines above before continuing with the recovery procedures:

1. Shutdown your Viglen PC (if applicable) and switch off.
2. Insert the Viglen Recovery Utility CD into the CD-ROM drive.
3. Switch your computer back on.
4. The Viglen Recovery Utility CD will now load.
5. When prompted, please type 'factory' and press the 'Enter' key to initiate system recovery.
6. A Windows style screen will now appear with two horizontal bars showing the status of the recovery sequence. Please wait while the procedure completes.
7. When prompted, remove the Recovery Utility CD from the drive and press a key to restart the computer. Windows will now start up and you will be prompted to enter you User Information – Please refer to the Software Guide supplied with your Viglen PC.

Your Viglen Recovery Utility CD....

WARNING

ONLY TO BE USED IF YOUR VIGLEN PC HAS BECOME UNSTABLE OR YOU HAVE BEEN ADVISED OTHERWISE BY A MEMBER OF VIGLEN TECHNICAL SUPPORT. ALL PERSONAL DOCUMENTS WILL BE LOST IF THIS CD IS ACTIVATED.

Hopefully, you should never need to use this utility, but in the unfortunate event that your system must be reinstalled, please keep this Getting Started Guide and the Viglen Recovery Utility CD in a safe place to help ensure a hassle-free recovery.



Getting Help at Viglen

Technical Support

If you have any queries concerning the following:

- 1 Hardware configuration problems.
- 2 You wish to return your hardware for repair or arrange a service visit (subject to contract).
- 3 You have installation or set up difficulties.
- 4 You require additional drivers.

Please call our TECHNICAL SUPPORT department on **01727 201 850**

Customer Care

If you have any queries concerning the following:

- 1 Parts missing or damaged from your Viglen PC order.
- 2 Incorrect goods supplied against your Viglen PC order.
- 3 Any complaint with a courier or delivery in general.
- 4 Collection of any computers or parts.
- 5 You have ordered or wish to order spare parts.
- 6 You wish to return your Viglen PC for an upgrade.
- 7 You wish to know the status of any returned Viglen PC.
- 8 You require information on upgrading new or old systems.

Please call our CUSTOMER CARE department on **01727 201 810**

Important

Please read this pamphlet before switching on the Viglen PC and store in a safe place. For further information regarding your Viglen PC please refer to the Viglen Driver CD which Includes the BIOS, Drivers and Manual for your motherboard.



Viglen Limited,
VHQ,
7 Handley Page Way,
Old Parkbury Lane,
Colney Street,
St. Albans, Hertfordshire
AL2 2DQ

Corporate Sales	01727 201 830
Education Sales	01727 201 860
Public Sector Sales	01727 201 830
Schools Sales	01727 201 820

Email sales@viglen.co.uk
Web www.viglen.co.uk